

ACCESSORY SETUP INSTRUCTION

FRONT BUMPER ASSEMBLY -- PN: 9AWV-801100-8000

VALID FOR: **MY2024 and Newer CFORCE 800 TOURING (G3) & CFORCE 1000 TOURING (G3)**

BEFORE YOU BEGIN: Read and understand the instructions before starting any work. Make sure that all parts are ready and that you have all the tools required for assembly.

NOTE: CFMOTO shall not be liable for any damage caused by incorrect assembly. CFMOTO recommends that all original accessories be assembled by an authorized CFMOTO dealer.

Before assembly, park the vehicle on a flat surface, put the transmission gear into Park (P) and turn off the key switch.

Zhejiang CFMOTO Power Co., Ltd. All rights reserved. Reproduction of this document, even in part, as well as copying of all kinds, is permitted only with the express written permission of the copyright owner.

MEANING OF SYMBOLS




- Indicates information with more details or tips.



- Indicates information of warning or danger.

PARTS LIST:


ITEM	PART NAME	PART NUMBER	QTY.	REMARK
1	Front Bumper Assembly	9AWV-801100-8000	1	For structure reference only
2	Front Bumper	9AWL-234000-8000	1	
3	BOLT M8*16	30006-080016870	2	

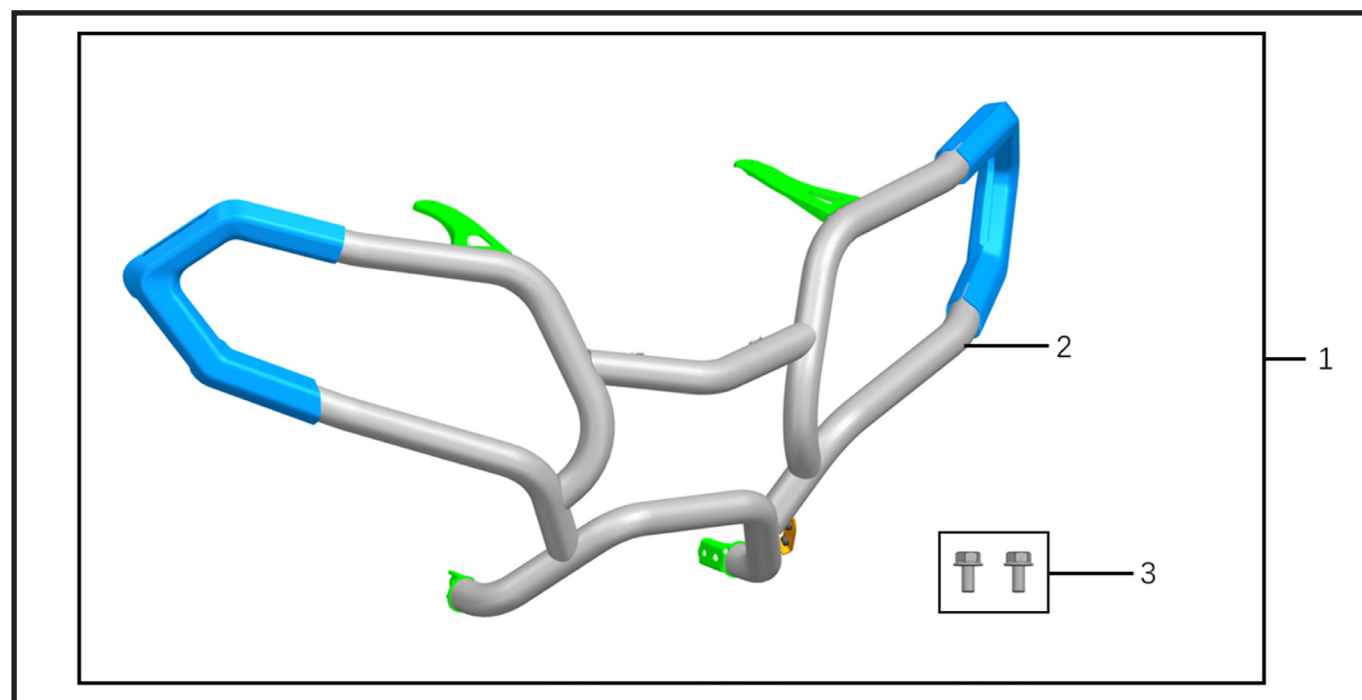


TOOL LIST:

ITEM	DESCRIPTION	QTY.	REMARK
1	ELECTRIC WRENCH	1	Recommended tools, which are not included in the package.
2	SOCKET 10mm	1	
3	SOCKET 13mm	1	
4	OPEN END WRENCH 10mm	1	
5	OPEN END WRENCH 13mm	1	
6	TORX WRENCH T30	1	
7	PROTECTIVE GLOVES	1	

ASSEMBLY AND INSTALLATION

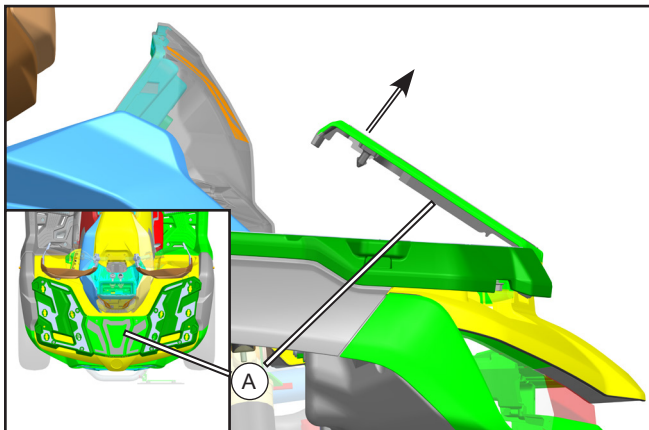


// Pull up the front service cover (A) in the arrow direction shown and remove it.

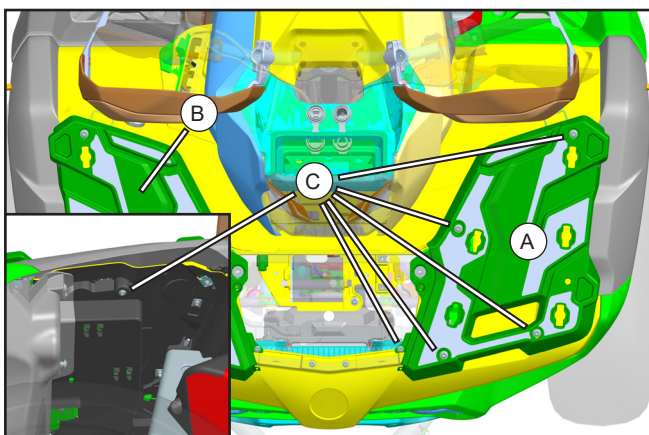


// Remove the six screws (C) from each front rack panel (A, B), then remove the panels.

i - Left side shown. Right side is the same method to remove.

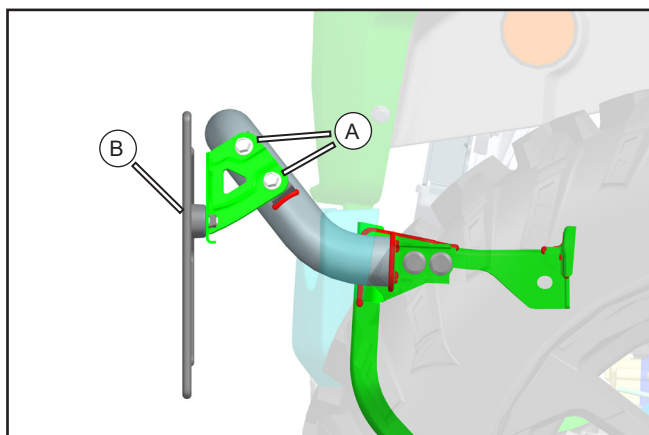


// **(B) - if equipped:** Unscrew two M6x12 bolts (A), then take out the front license frame.

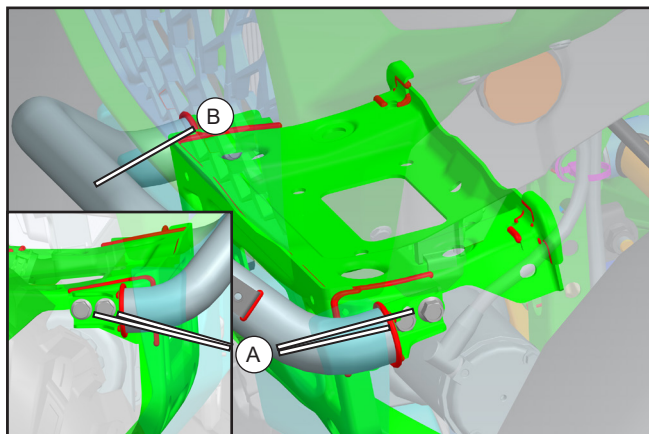


// Unscrew four M8x16 bolts (A), then take out the original front bumper (B).

ASSEMBLY AND INSTALLATION

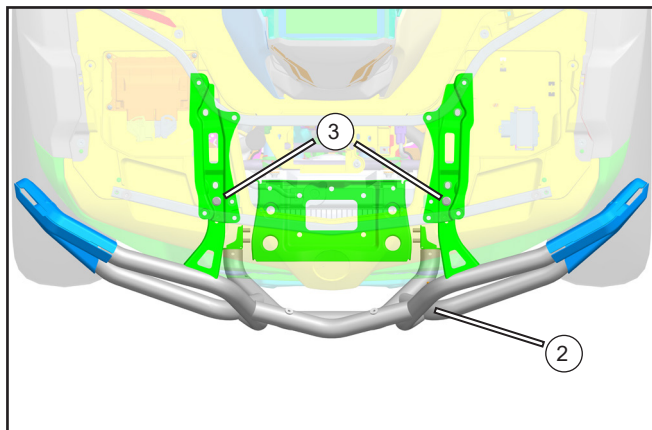


// Place the Front Bumper Assembly (2) into position, then install and finger-tighten two M8x16 bolts (3) to secure the bumper on the frame sheet metal. *Do not fully tighten at this time.*

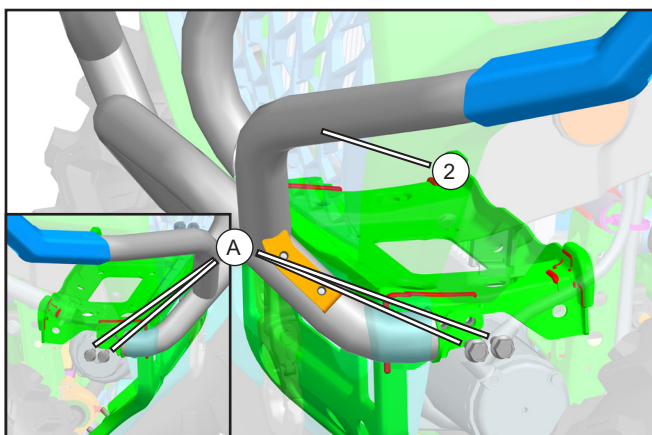


// Secure the bumper end mounts to the frame with the removed M8x16 bolts (A).

i - Secure the torx bolts at this time.

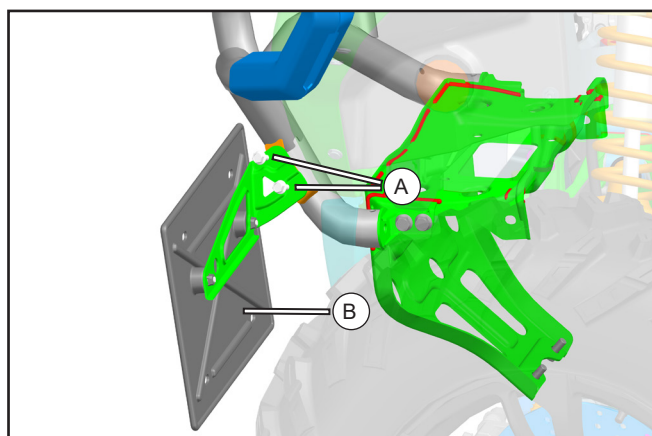


// **(B) - if equipped:** Place the front license frame into position, then secure it with the removed M6x12 bolts (A).

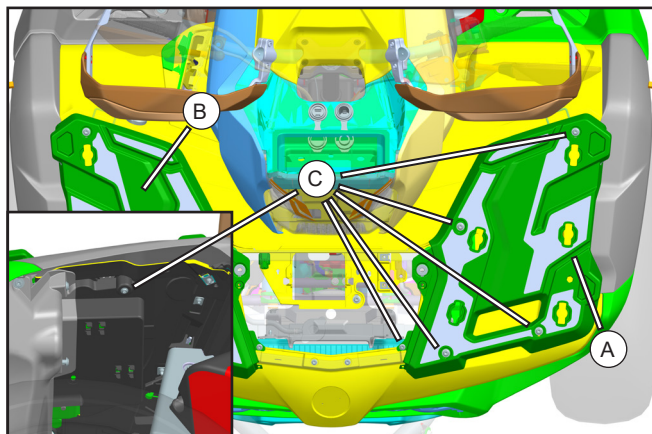


// Reinstall LH and RH front rack panels (A,B), then secure them with the removed screws (C).

i - Left side shown. Right side is the same method to install.

ASSEMBLY AND INSTALLATION

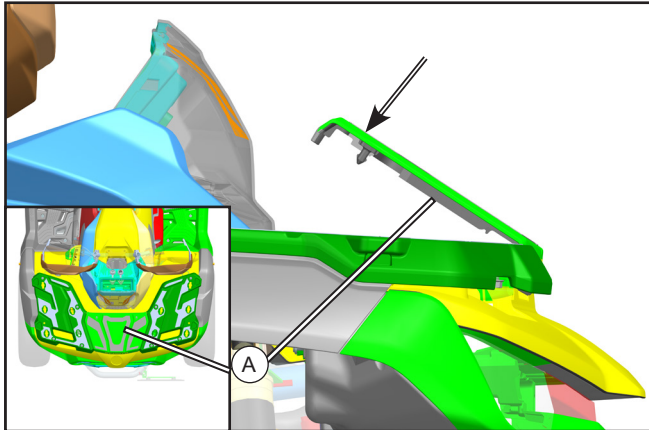

// Install the front service cover (A).

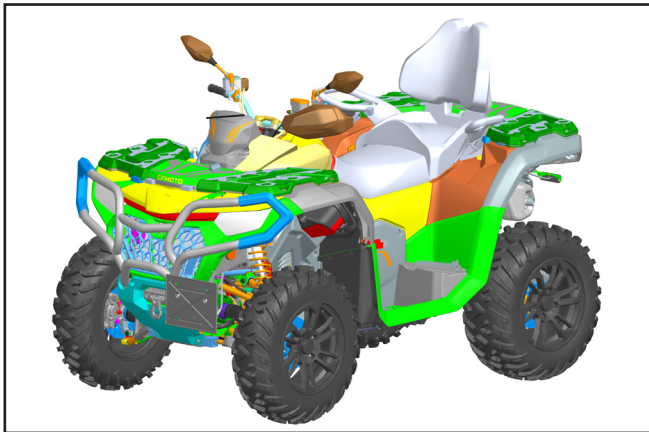

// The installation of the **Front Bumper Assembly** is completed.