

## ACCESSORY SETUP INSTRUCTIONS

OFF-ROAD LOWER BUMPER ASSY& OFF-ROAD LOWER BUMPER ASSY\_ GREY PN: 6AQV-802000-6000&6AQV-802000-6001

VALID FOR: CF400-8

**BEFORE YOU BEGIN:** Read and understand the instructions before starting any work. Make sure that all parts are ready and that you have all the tools required for assembly.

**NOTE:** CFMOTO shall not be liable for any damage caused by incorrect assembly. CFMOTO recommends that all original accessories be assembled by an authorized CFMOTO dealer.

Before assembly, park the vehicle on a flat surface and turn off the vehicle.

**Zhejiang CFMOTO Power Co., Ltd.** All rights reserved. Reproduction of this document, even in part, as well as copying of all kinds, is permitted only with the express written permission of the copyright owner.

### MEANING OF SYMBOLS




- Indicates information with more details or tips.



- Indicates information of warning or danger.

### PART LIST:


S/N	PART NAME	PART NUMBER	QTY.	DESCRIPTION
1	OFF-ROAD LOWER BUMPER ASSY& OFF-ROAD LOWER BUMPER ASSY_ GREY	6AQV-802000-6000&6AQV-802000-6001	1	Picture is for structure reference only.
2	LH LOWER BUMPER&LH LOWER BUMPER_ GREY	6AQV-802100-6000 &6AQV-802100-6001	1	
3	RH LOWER BUMPER&RH LOWER BUMPER_ GREY	6AQV-802200-6000&6AQV-802200-6001	1	
4	BUSHING&BUSHING_ GREY	6AQV-802001-6000&6AQV-802001-6001	2	
5	INNER HEX SCREW M8×35	6AQV-802000-6000-20	2	
6	INNER HEX SCREW M8×30	6AQV-802000-6000-21	2	

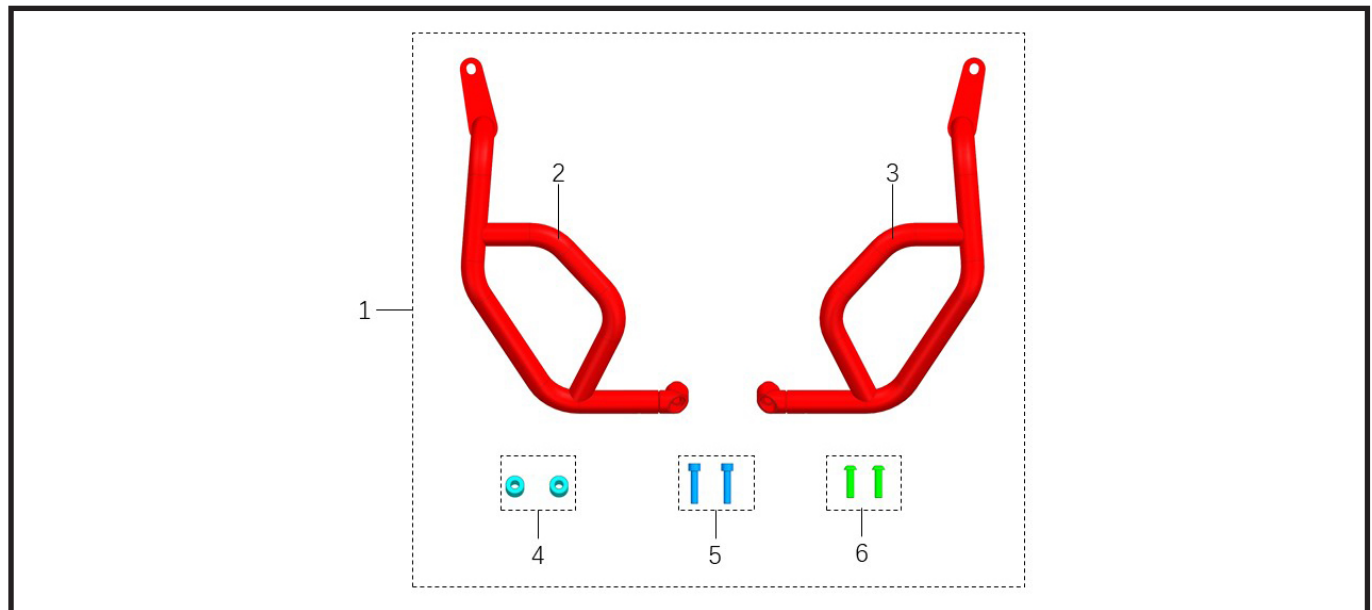

### TOOL LIST:


ITEM	DESCRIPTION	REMARK
1	s=5, s=6 INNER HEX WRENCH	Recommended Tools
2	PROTECTIVE GLOVES	

## WORK

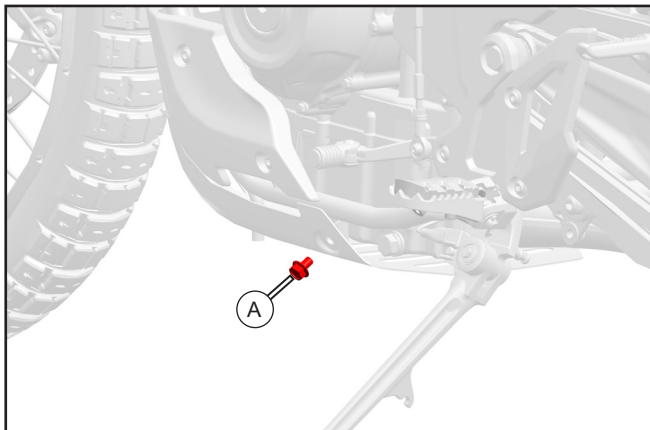


// Remove the bolt (A) from the lower panel as shown.

**i** - The bolt on the right side is disassembled in the same method.

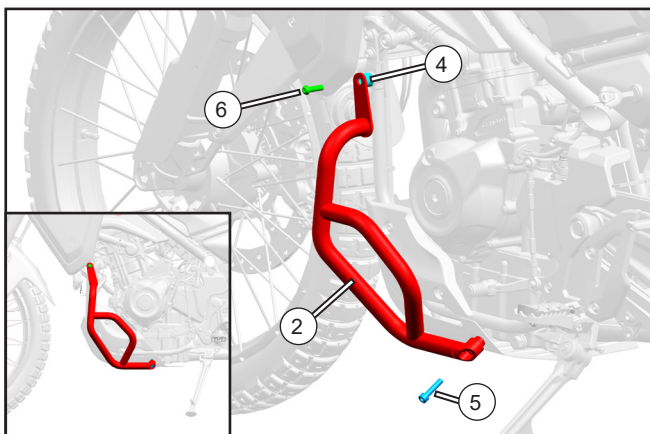


// Place the bushing (4) and LH lower bumper (2) on corresponding position as shown, align the installation holes, then secure the LH lower bumper with supplied inner hex screws (5,6).

**i** - The RH side box bracket is assembled in the same method.

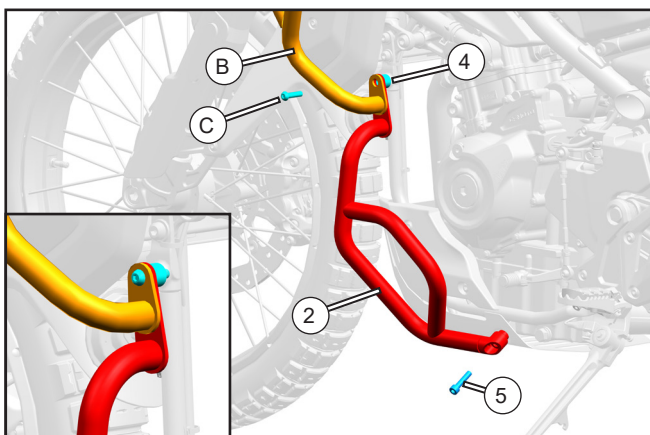

// If the LH lower bumper is installed together with the LH bumper, place the bushing (4), LH lower bumper (2) and LH bumper (B) on corresponding position as shown, align the installation holes, then secure them with supplied inner hex screws (5, C).

**i** - The parts on right side are assembled in the same method.  
- Screw (C) is the inner hex screw M8×35 packaged in the bumper assembly (B).

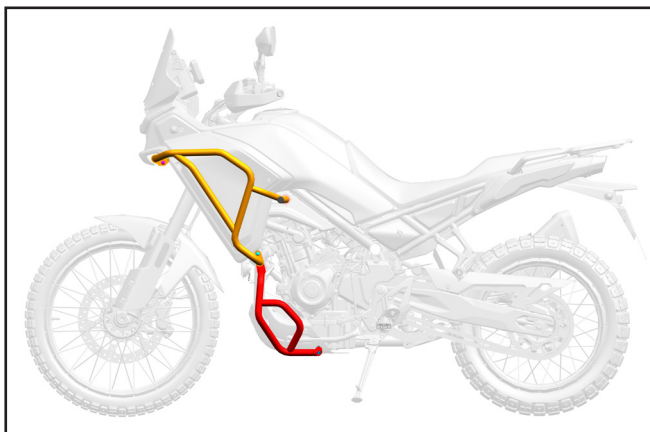

// Assembly is complete.